



COTTON CANDY MACHINE



Tips

1. ALWAYS add sugar with the motor turning.
2. Fill 90% full when adding sugar.
3. Reduce "heat control fine-tuning" setting to eliminate smoking of machine.
5. If floss is too thick, raise the heat control setting. If floss is too thin, lower the heat control setting.

Floss Making Procedures

1. Moisten the inside of the floss pan with a damp cloth so floss will adhere to the pan.
2. Note the direction of the floss as it is spun off the floss head.
3. Adjust floaters (on top of the spinner head); up for more lift, down for less.
4. Hold the cone an inch or two at the pointed end between two fingers and thumb.
5. Break into the web of floss with a light flicking motion.

6. Lift up the cone with the ring of floss attached and wind the floss onto the cone.

7. Brush cone with damp sponge so floss does not adhere to cone.

8. Roll floss on outside of pan ONLY.

9. Turn the ring of floss onto the cone in a "figure 8" pattern to make a larger web.

Tips for successful cotton candy

Use only cotton candy floss sugar. DO NOT USE REGULAR GRANULATED SUGAR.

If all else fails.....

In the event that the equipment fails, please do not attempt to repair it yourself, instead, please contact our office at **361-992-9813**