



Pop Corn Machine



Tips

Switches

Light and Warmer Switch - turns on heat lamp and optional strip heater under corn pan.

Kettle Motor Switch - turns on motor that drives kettle agitator shaft.

Kettle Heat Switch- turns on heat element inside kettle.

DO NOT COVER VENT HOLES!!!!
DO NOT TOUCH KETTLE WHILE IT IS HOT!!

To Pop

1. Turn on kettle heat, kettle motor, and light and warmer switch.

2. Fill kettle with pre-measured oil and allow to heat for approximately 10 minutes. Add pre-measured popcorn to kettle and close lid.

3. When corn has popped, rotate the handle to empty popcorn from kettle; return kettle to upright position.

4. Repeat the cycle; subsequent batches are always more flavorful than the initial batch.

5. Turn off the kettle heat switch on the final batch when the popcorn breaks over the lid of the kettle to eliminate smoke and odor.

6. Turn off kettle heat and kettle motor.

7. Wipe exterior of kettle with heavy cloth after cooling of kettle to prevent burn or stain of oil drippings.

8. Allow the kettle to cool until it is warm enough to handle.

10. Unplug kettle and remove from machine.

11. Wipe kettle, kettle lids, cross bar, inside and exterior clean....**DO NOT IMMERSE IN WATER!!**

If all else fails.....

In the event that the equipment fails, please do not attempt to repair it yourself, instead, please contact our party line at **361-992-9813** for further assistance.